

**Please read the following instructions  
before operating your Sharpener!**

### **Cautions**

---

1. Unplug the sharpener from power source for cleaning and maintenance. Use a damp cloth and soap to clean the outer cover. Never use flammables liquid like thinner, benzine or alike.
2. Never place the sharpener on a radiator, heater or water.
3. Don't place this sharpener and its cord on a corridor. Avoid any object pressing on the cord.
4. Protect blades from any damage do not sharpen pastels, rubber erasers, pens or any other items which are not graphite pencil or coloured pencils.
5. Don't sharpen more than 25 new pencils at once. The motor will shut down when overhead.


**PLEASE, KEEP THIS MANUAL  
FOR FUTURE REFERENCE.**

## Operating Instructions


---

1. Place the sharpener on a flat surface close to an easily accessible socket outlet. Plug the sharpener into wall socket using the power cable provided. (**AC 110V ~ 60Hz**)
2. Insert the pencil into the center hole, holding it firmly but pressing only lightly. The sharpener will start operating automatically.
3. Remove the pencil when the sharpened is ready.
4. To avoid operating problems, we recommend to empty the drawer frequently.


**Note: If the pencil don't have a centered lead, will not have a uniform sharpened.**

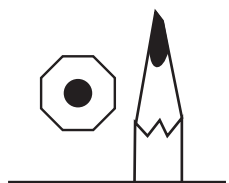

**CENTERED LEAD**

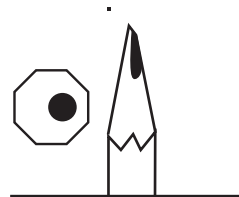

**OFF-CENTER LEAD**

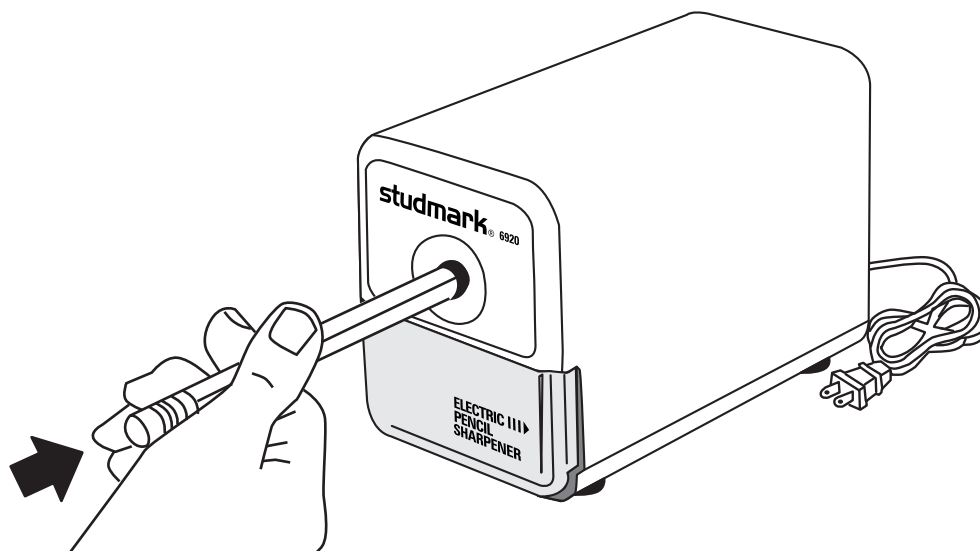


## Emptying the Sharpener

---

1. Unplug the Sharpener from power outlet
2. Remove the scraps deposit.
3. Empty the pencil scraps in a waste basket.
4. Replace the deposit into the sharpener.
5. Plug the equipment again to the power outlet.

**Note: As a safety measure, the sharpener won't work when the deposit is removed.**

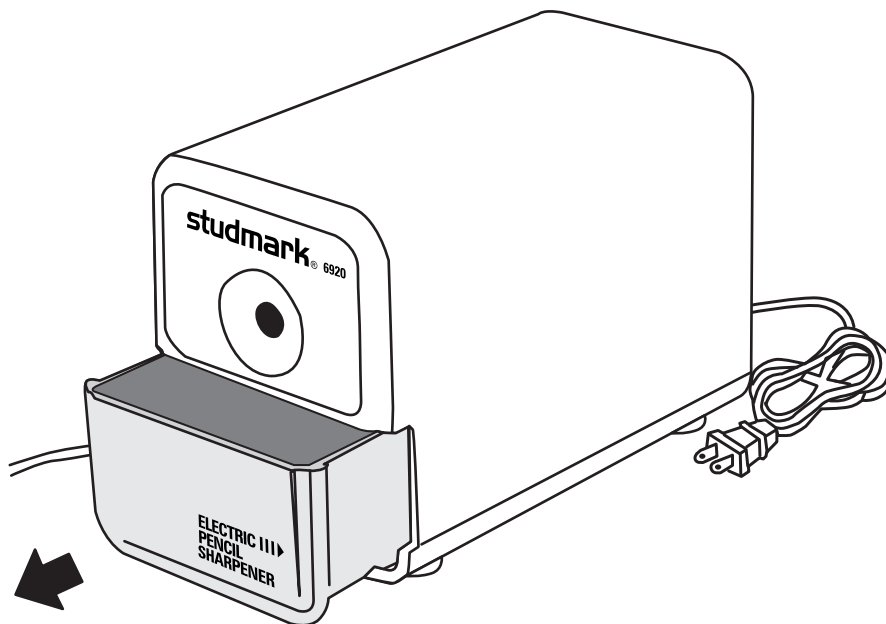

## Specifications

---

**Power source:** AC 110V ~60Hz

**Electric current:** 1.4A

**Measures:** 145x77x150mm

**Net weight:** 1.0Kg

## Caution

---

- 1.- To prevent motor damage, remove the pencil from the entry when it is already sharpened.
- 2.- Don't introduce hard object like pens, oil crayons, rubber erasers or others, could harm or jam the sharpener's blades.
- 3.- The outer cover can be cleaned using a damp cloth (never use thinner, benzine, gasoline and alike)

